


The *Catlink Port Expander* expands a Catlink Distribution Hub port to 8 inlet/outlets.

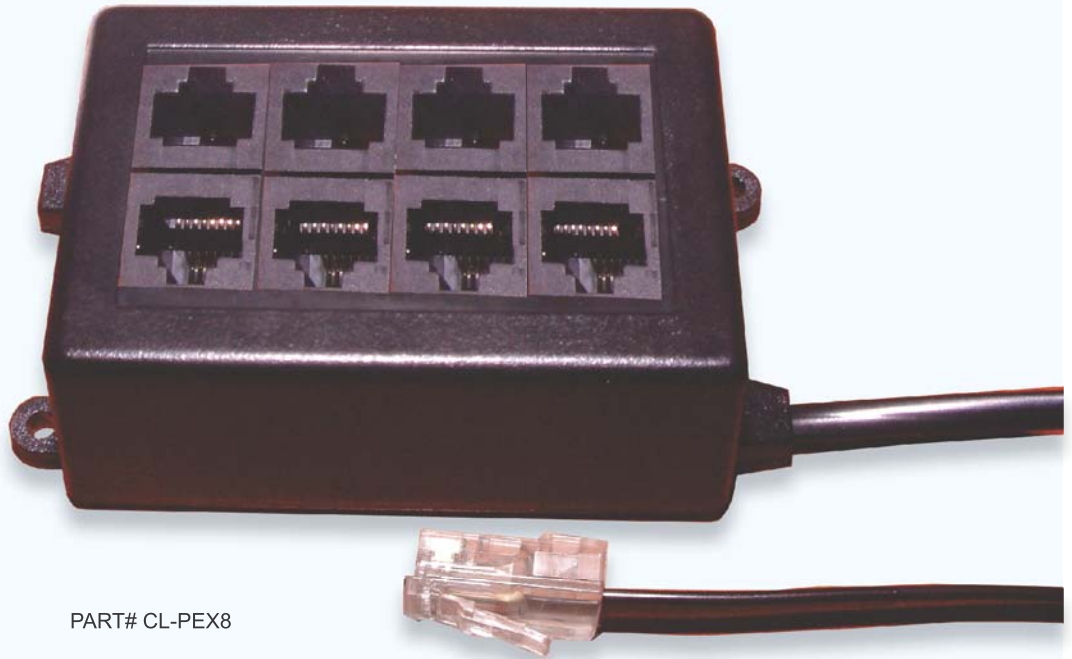

PART# CL-PEX8

Equipped with a 25cm lead terminated with a RJ45 jack for plugging into a Catlink Distribution Hub port or remote RJ45 socket.

Provided with case flanges for screwing to wall or bracket.

## Specifications

<i>Part Number</i>	CL-PEX8
<i>Number of expansion ports</i>	8
<i>Recommended Maximum number of receiver heads plugged into port expander.</i>	6
<i>Recommended maximum number of Emitter Pairs plugged into port expander.</i>	4
<i>Dimensions (not including flanges &amp; cable)</i>	80mm (W) x 57mm (D) x 34mm (H)